

ShowEze™ -The Deal BannerWall

INSTRUCTION SHEET




Carefully remove each stand from their respective bag.





Turn stabilizing foot to a 90 degree angle.




Remove the tri-fold pole from the rear of the base. Insert into the hole on the top rear of the base, making sure it is seated to the bottom of the hole.

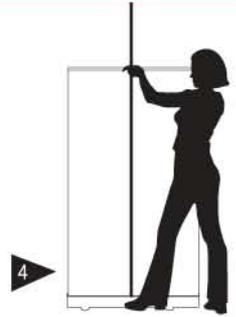

Holding the top rail firmly, pull the graphic out of the base. As the banner rises, **lean the stand back** and attach the hook to the top of the pole.

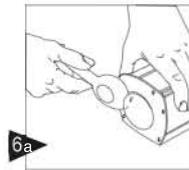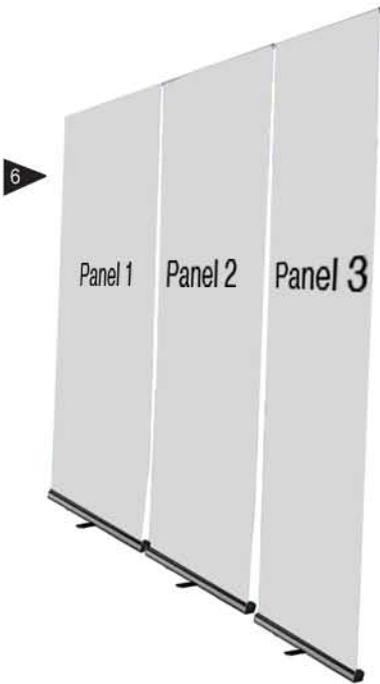

With a small screwdriver or other flat tool, gently remove the black plastic cap on both sides of Panel # 2 on each side of Panel #1 & 3 that are facing Panel #2. **BE VERY CAREFUL NOT TO EVER TOUCH OR MOVE THE METAL FLAT BAR THAT'S EXPOSED.**

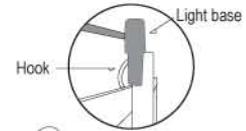

Optional


To insert light onto top of pole, align top rail hook through center groove of light base.

Looking at the Panel # on the label on the top of each base, assemble the bases as shown. Next, in the plastic pocket of one of the bags, there will be two black couplers with hand screws on the top. Make sure the screws are backed out for easy insertion. Take each coupler and slide approx. half into the side hole on the top rail on each side of Panel #2. Gently tighten each screw of the coupler that's inside the rail on Panel #2.

To make the gap tighter in between the panels see option *6a above.

Next, put the exposed side of the coupler into the rail of Panels #1 & 3, **DO NOT TIGHTEN THE COUPLER SCREW AT THIS POINT.** Move the bases so they are as close as possible together. For the closest possible fit, offset Panel #2 so it's flat bar is slightly behind the bars on Panels 1 & 3, this off-set will not be noticeable from the front. Stepping back from the wall, adjust the gap to your liking and tighten the coupler screws on top.

Breaking Down Wall.

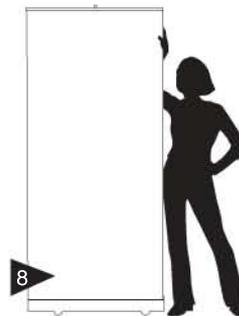

Loosen the rail couplers. gently slide stands apart, enough to remove the couplers from the rails. next rove the lights.

Place stand into position where you are standing at the rear of the unit. Unfasten top hook and **FIRMLY** grip (do not let go, if you do the unit could be permanently damaged) while lowering the banner **SLOWLY, EVENLY CENTERED** into the base. You can now put back the black end caps and out back into the bags.

Please do not hesitate to call with any questions, we are here to help.